

# SPORT GRIP®

## INSTALLATION INSTRUCTIONS

### READ INSTRUCTIONS CAREFULLY!

Not following these instructions can result in damage to your sportgrip.

**COVERS TORN DURING INSTALLATION ARE NOT COVERED UNDER FACTORY WARRANTY.**


#### \*\* Warm this cover before installing!

There are several methods to warm your SportGrip.

- Leave opened SportGrip cover on the dashboard in direct sunlight until cover is warm to touch.
- If weather is cold, place cover over the defroster vent on the dashboard on high heat until cover is warm to the touch.
- Use a hair dryer to apply hot air to the cover until it is warm to the touch.

#### \*\* DO NOT USE YOUR FINGERTIPS INSIDE TO STRETCH COVER OVER STEERING WHEEL.

1. Place cover over the top of your steering wheel. Seam should be toward the bottom of the wheel.
2. Insert your hands in between the steering wheel and the cover. Your knuckles should be touching the cover and the palm side of your hand should be touching the steering wheel.
3. Slide your hands toward the bottom of the steering wheel until you get some good resistance then stop. Move your hands up and down the steering when SLOWLY stretching the cover a little more each time until it slips over the bottom of the wheel.

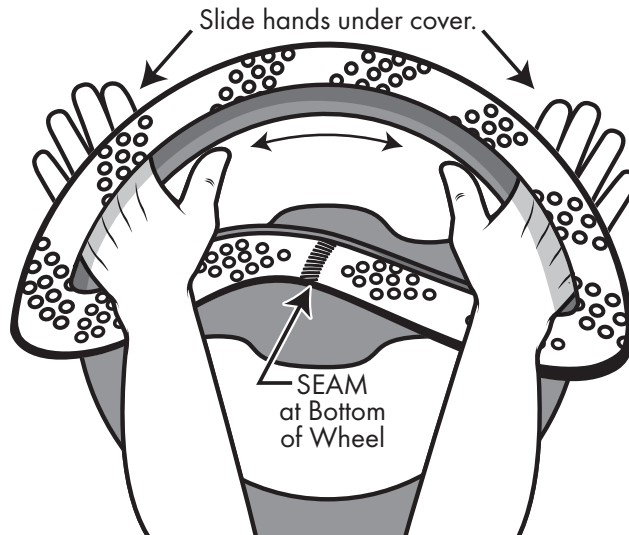


SUPERIOR AUTOMOTIVE  
4500 Malone Road  
Memphis, TN 38118  
1-800-545-9882  
1-901-758-9999  
MADE IN CHINA • HECHO EN CHINA




**WARNING:** Cancer and Reproductive Harm - [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)  
**ADVERTENCIA:** Cáncer y daño reproductivo - [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

- 2 Stretch SPORT GRIP over wheel with lace in position as shown. Overlap edges - tucking back edge under the front edge as you lace.

FRONT EDGE OVER  
BACK EDGE UNDER

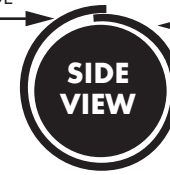


Position lace at bottom of wheel

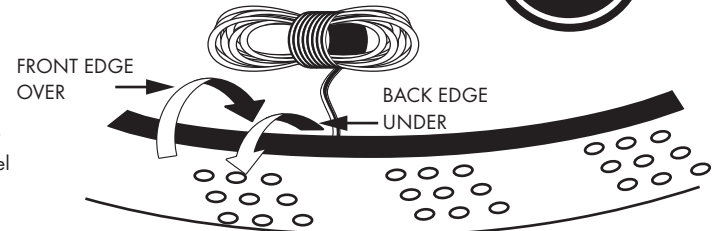


- Do not unravel lace as you wrap. Remove one section at a time from gathering.
- As you wrap cover, stretch lace approximately 25%.
- Sport Grip Size C may overlap on thinner steering wheels. For proper installation, make sure to pull tight, overlap material and lace repeatedly.

- 3 Stretch lace firmly as you wrap around wheel. Use non-perforated areas as your wrapping guide.

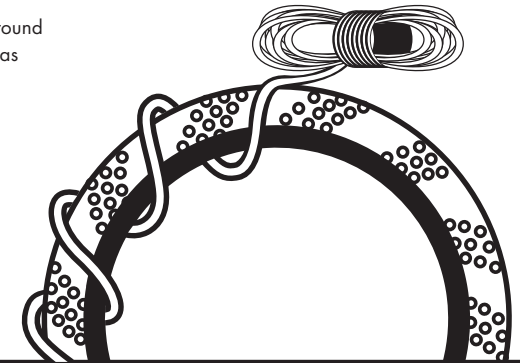


- 1 **SPECIAL NOTE:** Due to manufacturing techniques, some SPORT GRIPS have an opposite wrapping pattern than that shown in steps 2-5. Some wrap clockwise as in example "A" below. Some wrap counterclockwise as in example "B". After placing your SPORT GRIP over steering wheel, look at the examples below and notice in which direction the wrapping guide runs on your particular SPORT GRIP.

#### EXAMPLES

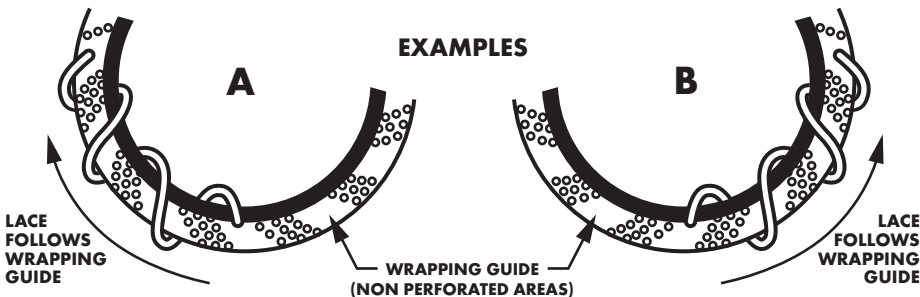


Now continue with steps 2-5 keeping in mind that you may have to wrap your wheel in the opposite direction than that shown in the illustration, depending on the direction of your wrapping guide.

- 4 Under the last winding, insert as shown. Repeat operation on the next to last winding, as shown in illustration number 5.

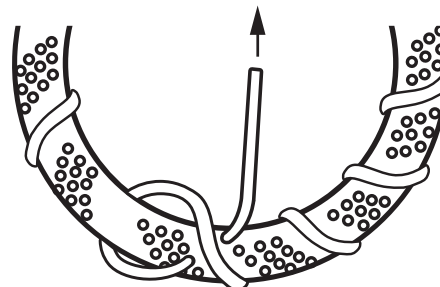

- 5 SPORT GRIP SIZE C may overlap on thinner steering wheels. For proper installation, make sure to pull tight, overlap material and lace repeatedly.

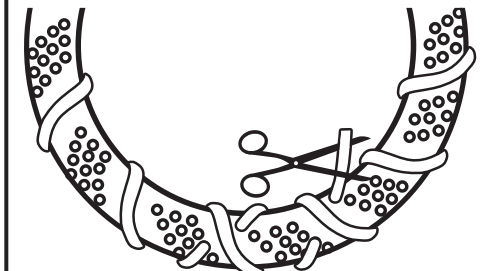



## Instrucciones de instalación de Sport Grip®

### ¡LEA CUIDADOSAMENTE LAS INSTRUCCIONES!

No seguir estas instrucciones puede resultar en daños a su sportgrip.

**LAS CUBIERTAS ROTAS DURANTE LA INSTALACIÓN NO ESTÁN CUBIERTAS BAJO**

**GARANTÍA DE FÁBRICA \* \* ¡Caliente esta cubierta antes de instalarla!**

Hay varios métodos para calentar su SportGrip.

- Deje la cubierta SportGrip abierta en el salpicadero a la luz directa del sol hasta que la cubierta se caliente al tacto.
- Si el clima es frío, coloque la cubierta sobre el respiradero de descongelación en el salpicadero a fuego alto Hasta que la cubierta esté caliente al tacto.


• Use un secador de pelo para aplicar aire caliente a la cubierta hasta que esté caliente al tacto.

**\* \* NO UTILICE SU DEDO EN EL INTERIOR PARA ESTIRAR LA CUBIERTA SOBRE LA RUEDA DIRECTA.**

**1.** Coloque la cubierta sobre la parte superior de su volante. La costura debe estar hacia el fondo de la rueda.

**2.** Inserte sus manos entre el volante y la cubierta. Sus nudillos deben tocar la cubierta y el lado de la palma de su mano debe tocar el volante.

**3.** Deslice sus manos hacia la parte inferior del volante hasta que obtenga una buena resistencia y luego pare. Mueva las manos hacia arriba y hacia abajo de la dirección al estirar LENTAMENTE la cubierta un poco más cada vez hasta que se deslice sobre la parte inferior de la rueda.

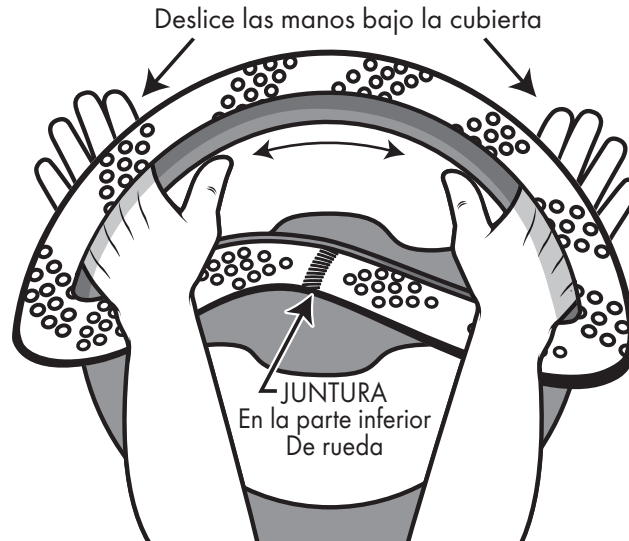

**1** **NOTA ESPECIAL:** Debido a las técnicas de fabricación, algunos SPORT GRIPS tienen un diseño de evolutura opuesto a las imágenes en los pasos 2-5. Algunos se enrollan en el sentido de las agujas del reloj como en el ejemplo "A" a continuación. Algunos envuelven en sentido antihorario como en el ejemplo "B". Después de colocar su SPORT GRIP sobre el volante, observe los ejemplos a continuación y observe en qué dirección funciona la guía de embalaje en su SPORT GRIP en particular.




Ahora continúe con los pasos 2-5 teniendo en cuenta que puede que tenga que envolver su rueda en la dirección opuesta a la que se muestra en la ilustración, dependiendo de la dirección de su guía de embalaje.

**2**

Estire el SPORT GRIP sobre la rueda con encaje en posición como se muestra. Superponer los bordes - doblando el borde trasero bajo el borde frontal mientras te encajas.

Borde delantero ENCIMA  
Borde trasero bajo DEBAJO


Encaje de posición en Parte inferior de la rueda

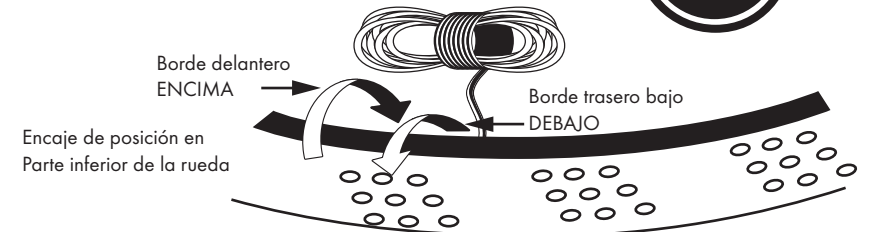

- No desentrañar el encaje mientras lo envuelve. Retire una sección a la vez.
- Al enrollar la cubierta, estire el cordón aproximadamente un 25%.
- El Sport Grip Size C puede superponerse en los volantes más delgados. Para una instalación correcta, asegúrese de tirar del material apretado, solapado y encaje repetidamente.


**3**

Estire el cordón firmemente mientras enrolla la rueda. Utilice las áreas no perforadas como guía de embalaje.

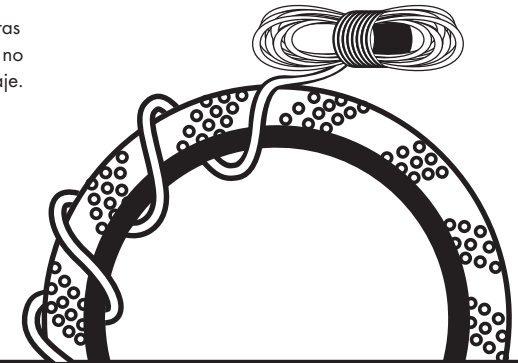

**4**

Bajo el último devanado, insertar como se muestra. Repita la operación en el próximo al devanado, como se muestra en la ilustración número 5.

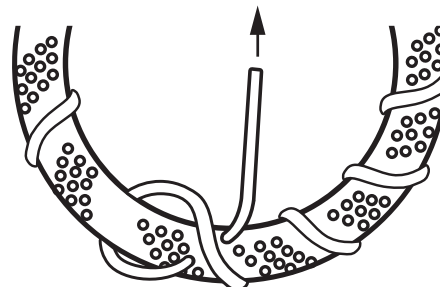

**5**

SPORT GRIP SIZE C puede superponerse en los volantes más delgados. Para una instalación correcta, asegúrese de tirar del material apretado, superpuesto y encaje repetidamente.

